

HomeLink® GARAGE DOOR OPENER



- While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.
- Push and hold both the HomeLink* button being programmed and the button on the garage door transmitter.

TO **ERASE ALL SET CHANNELS:**

Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.



Rolling or Non-Rolling?

Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

For Non-Rolling Code garage door openers, watch for the indicator light to go constant.

For Rolling Gode garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.

- For Rolling Gode garage door openers only, firmly push and release the "LEARN" or "TRAIN" button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle for two long presses.
- If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

For more detailed instructions, see "Universal Garage Door Opener (HomeLink®)" in your Owner's Manual. Please call 1-800-355-3515 if you require assistance.



Lights & Wiper Operation



Parking Lights & Instrument Panel Lights

Headlights, Parking Lights & Instrument Panel Lights



Lights Off


Automatic Lights

Fog Lights

Dimmer Control



Vehicles sold in Canada are equipped with a headlight switch with an AUTO and ON detent but without an OFF detent. Headlights will be deactivated when the headlight switch is placed in the parking lights position. However, the Daytime Running Lights will be activated along with the front and rear marker lights.

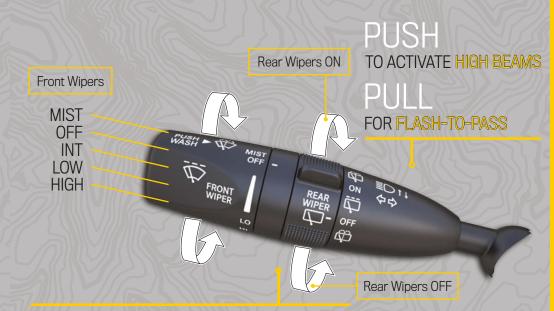

ROTATE UP

TO ACTIVATE THE REAR WINDSHIELD WASHER

PUSH END

TO ACTIVATE THE FRONT WINDSHIELD WASHER



Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle



Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES

- 1) Press "Apps" on the touchscreen.
- (2) Press "Activate Services".
- (3) Press "Activate Now".
- (4) There are two ways to activate: via email or via an agent. On the next page, you can either enter your name and email, or press "Call An Agent" to directly speak with someone.

TIP:

You can use your remote commands from the Uconnect App, your Owner's Site account, or by calling an agent.

However, not all remote commands will work when calling the agent.


Mopar® YOUR Way

REAP THE BENEFITS OF YOUR OWNER'S PROFILE

Get an online experience all your own-tailored to you and your vehicle-accessible anytime, anywhere.



24/7 Access To Everything You Need

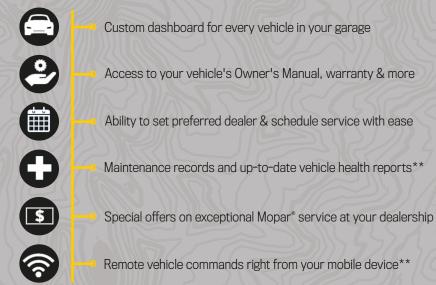

**Requires an active SiruisXM Guardian™ subscription

^{*}Canadian residents are not required to create a profile, as one is created when a SiriusXM Guardian™ account is activated.

Pair a Phone



1

Make sure Bluetooth® is enabled on your mobile device.

2

With the vehicle in the ON/RUN or ACC position, press the Phone button on the vehicle's touchscreen menu bar.

3

Press "Pairing" and then press "Paired Phones and Audio Devices".



Select "Add Device" then follow the prompts on your phone and on the touchscreen.

KEEP IN MIND

Some mobile phones will require you to enter a PIN as part of the connection process.

For more detailed connecting instructions, refer to "Phone Operation" in your Uconnect radio book.

Ready to remove a phone or audio device?



- (1) Press the "Pairing" button on the touchscreen.
- (2) Press "Paired Phones and Audio Devices".
- (3) Press "Settings" next to the phone or device you want to remove.
- (4) Press "Delete Device".
- (5) Press "X" to exit the settings screen. The device should be removed.

YOU MAY ALSO BE ABLE TO CONNECT YOUR APPS

If your vehicle is equipped with Android Auto™ & Apple CarPlay®, connect your unlocked smartphone to one of the media USB ports in your vehicle.

Once connected and recognized, the Android $^{\text{TM}}$ or CarPlay $^{\text{*}}$ icon will replace the phone icon on your personalized menu bar.

KEEP IN MIND:



For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.



For Apple Users, Apple CarPlay is only compatible with iPhone 5 or later and requires Siri being enabled in Settings.

Climate Controls



TIP:

Push the **red** arrow button to increase the temperature or push the **blue** arrow button to decrease the temperature for the driver or the passenger.

The button will engage the Air Conditioning (A/C) system.



RECIRCULATION — The button will change the system to recirculation mode.

AUTO — The button will automatically control the cabin temperature.

FRONT DEFROST — The button will engage the Front Defrost mode.

REAR DEFROST — The button will turn on the rear window defroster and heated outside mirrors.

BLOWER CONTROL — Rotating the knob regulates the amount of air forced through the system in any mode.

MODE — The button (touchscreen) will change the airflow distribution mode.

The button will turn the Climate Controls on/off.

 
Selec-Terrain Modes

CHOOSE THE MODE THAT FITS YOUR ROAD CONDITIONS





Rotate the Selec-Terrain Switch to select the desired mode.

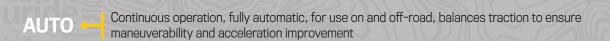



SNOW Greater stability under bad weather conditions, for use on and off-road on surfaces with poor traction (e.g. roads covered with snow)

For off-road driving use on surfaces with poor traction (e.g. dry sand)

MUD For off-road driving use on surfaces with poor traction (e.g. roads covered by mud or wet grass)

Only available in 4WD Low range, for maximum off-road performance, used on surfaces with obstacles such as large rocks and deep ruts

Warning & Indicator Lights

*	Air Bag		Battery Charge	BRAKE	Brake	1	Door Open	<u>@</u> !	Electric Power Steering Fault
M	Electronic Throttle Control (ETC)	Ł.	Engine Coolant Temperature	3	Hood Open	2	Liftgate Open	957	Oil Pressure
E	Oil Temperature	*	Seat Belt Reminder		Transmission Temperature		Vehicle Security	4WD LOW	4WD Low
	Air Suspension Active	AERO	Air Suspension Aerodynamic	ENTRY/ EXIT	Air Suspension Entry/Exit	OFF RD 1	Air Suspension Off-Road 1	OFF RD 2	Air Suspension Off-Road 2
(ABS)	Anti-Lock Brake System (ABS)		Electronic Stability Control (ESC) Active	OFF.	Electronic Stability Control (ESC) OFF	Ç	Engine Check/ Malfunction Indicator	off.	Forward Collision Warning (FCW) OFF
	LaneSense		Low Fuel		Low Washer Fluid	NEUTRAL	NEUTRAL	SERV 4WD	Service 4WD
R!	Service Adaptive Cruise Control	*	Service Forward Collision Warning (FCW)	(3)	Service LaneSense	(A)!	Service Stop/ Start System	(!)	Tire Pressure Monitoring System (TPMS)
	Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target	(6)	Cruise Control Set	却	Front Fog		LaneSense
÷00€	Parking Lights/ Headlights On	F	Sport Mode	(A)	Stop/Start Active	\$	Turn Signal		Adaptive Cruise Control (ACC) Ready
(*)	Cruise Control Ready	0	Hill Descent Control (HDC)		LaneSense	2	Selec-Speed Control	≣D	High Beam

For additional information on any of the topics in this publication, please refer to your Owner's Manual.