



仓

Garage Door Opener



While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.

Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons for 20 seconds until the orange indicator flashes. An individual channel cannot be erased.



ROLLING OR NON-ROLLING?

Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.



For Non-Rolling Code garage door openers, watch for the indicator light to go constant.

For Rolling Code garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.



For Rolling Code garage door openers only, firmly push and release the "LEARN" or "TRAIN" button on your garage door opener motor in your garage, then push the HomeLink® button in your vehicle three times (holding the button for two seconds each time).



If the programming was successful, your garage door should open and close with your chosen Homel ink® button.

Scan For HomeLink® Video





Pair a Phone



Make sure Bluetooth® is enabled on your mobile device

With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar

Press "Device Manager"

Press "Add Device"

Follow the prompts on your phone and on the touchscreen

Troubleshooting

- Perform a reset by holding the power button on the radio for 15 seconds
- 2 Reboot your phone

- Remove the paired phone
- Follow the Pair a Phone steps above to set up phone

CONNECT YOUR APPS

Connect your smartphone to the media USB port or pair your smartphone within Device Manager.

The Android Auto[™] or Apple CarPlay® icon will replace the phone icon on the touchscreen.

KEEP IN MIND:



For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.



For Apple® Users, Apple CarPlay® is only compatible with iPhone® 5 or later and requires Siri being enabled in Settings.

Ready to remove a phone or audio device?

- Press "Device Manager" on the touchscreen.
- Press the Settings gear icon next to the phone or device you would like to remove.
- Press "Delete Device". The device should be removed.
- On your phone's Bluetooth or Set Up menu, remove the saved Uconnect radio.



Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle



Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES



- Press "Apps" on the touchscreen.
- 2 Press "Activate Services".
- 3 Press "Activate Now".
- There are two ways to activate: via email or via an agent. On the next page, you can either enter your name and email, or press "Call An Agent" to directly speak with a certified agent.

 If you previously were registered for Connected Services at the dealership, you will only need to enter your email and PIN to activate them on your vehicle.
- Download the Jeep® Mobile App from the Google Play Store or Apple® App Store® for access to Remote Commands. Log in with your account information.

Mopar® YOUR Way

CREATE YOUR OWNER'S PROFILE TODAY!

Get 24/7 Access To Everything You Need



Custom vehicle dashboard



Access Owner's Information



Schedule dealer service with ease



Special offers on Mopar® services



View maintenance records**



Mobile vehicle commands**



Registration is simple.
Provide your email address to get started.



*Canadian residents are not required to create a profile, as one is created when a Uconnect Connected Services account is activated.

^{**}Requires an active Uconnect Connected Services subscription

Automatic Climate Controls




Uconnect 5/5 NAV

Available Modes:

- Home: Customize the Home screen with widgets.
- Media: Listen to the radio and play media.
- Phone: Pair your smartphone and make hands-free calls.
- Comfort: Adjust the vehicle's multiple climate systems.
- · Vehicle: Change vehicle settings.
- Navigation: Search for and navigate to any destination.

Swipe down to customize Profile options

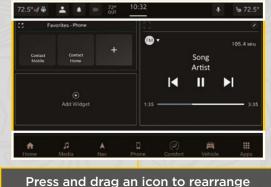

Voice Recognition

Use Your Voice To Control Uconnect

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle settings, you can also say the vehicle's "Wake Up" word, "Hey, Uconnect" or "Hey, Jeep®", without pushing any buttons.

KEEP IN MIND:

There may be an inconsistent volume between different audio sources.

Digital Cluster

To change your Cluster display from Digital to Analog, hold the OK button on the steering wheel.

Menus and Submenus

Indicates number of submenus

Main Menu

- Speedometer
- Night Vision
- Driver Assist

Vehicle Info

- Fuel Economy
- Gauge Summary
- Oil Life
- Tire Pressure
- Stop/Start

Trip Info

- Trip A
- Trip B

Navigation Off Road

- Terrain Status
- Vehicle Dynamics
- Pitch & Roll

Audio

Messages

Settings

- Screen Setup
- Head Up Display

Current Menu

 


Temperature Gauge

Fuel Gauge

Left & Right Arrows: Scroll Through Submenus



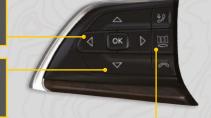

Access Tile Mode

To view the Cluster in Tile Mode, push the Tile Mode button. Use the Left/Right Arrows to scroll through menus and the Up/Down Arrows to access submenus. Tile information can be edited with the OK button.

CUSTOMIZE YOUR INSTRUMENT CLUSTER DISPLAY (ICD)

Select the Settings menu and the Screen Setup submenu. Press "OK" to begin and select the area you would like to customize. The area you have activated will illuminate.



Rear Seat Reminder Alert (RSRA)

If a rear door is opened within a 10-minute window before or after starting the vehicle, the driver will be warned by a message in the cluster to check the back seat when shutting down the vehicle.

Scan For Instrument **Cluster Display** Video



HEAD UP DISPLAY — WILL DISPLAY ON YOUR WINDSHIELD

Activate the Head Up Display through your Cluster. Select the Settings menu and the Head Up Display submenu. Press "OK" to begin.



Menu options:

- Display On and Off
- Content/Layout
- Display Height
- Brightness

Scan For

Head Up

Display Video



Driver & Passenger Memory Settings

 
PROGRAMMING A MEMORY PROFILE:



Place the vehicle's ignition in the ON/RUN position (do not start the engine).



Push and release the Set (S) button on the memory switch.

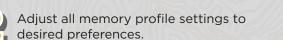



Within five seconds, push and release either of the memory buttons (1) or (2).

MEMORY BUTTONS



Save up to two memory profiles for the driver and front passenger seats, including position settings for:

- Seat position
- Easy Entry/Exit seat*
- Side mirrors*
- Power tilt/telescoping steering column*
- Radio station presets*

*Driver memory settings only

Personalize Your Steering

When enabled in the Uconnect Settings, this feature lets you customize the effort needed to steer your Jeep®. Choose between "Normal", "Comfort", and "Sport" settings to optimize your driving experience.

Scan For **Memory Settings** Video



Active Driving Assist (ADA) System

COMBINES ACTIVE LANE MANAGEMENT AND ADAPTIVE CRUISE CONTROL



INDICATOR LIGHT & INSTRUMENT CLUSTER DISPLAY GLOW:

OFF System not turned on/enabled

System is turned on/enabled, but is not WHITE actively steering the vehicle

System detects driver attentiveness and **GREEN** is actively steering the vehicle

YELLOW

System detects driver inattentiveness and warns the driver to place hands on the steering wheel, or if equipped with hands-free ADA. look back toward the road

System still detects driver inattentiveness and still warns the driver to place hands on the steering wheel, or if equipped with hands-free ADA, take control of the vehicle, or the system will cancel

Scan For **Active Driving Assist Video**

The base ADA system requires the driver keep both hands on the steering wheel at all times.



Front Passenger Screen

This screen provides the passenger access to Radio, Rear Seat Entertainment with Fire TV built-in, HDMI, and Navigation functions. It is located on the passenger side of the vehicle, above the glove compartment.

Push the power button above the radio's right side.



Rear Seat Entertainment with Fire TV built-in

Rear Seat Entertainment with Fire TV built-in can stream movies, music, and much more!

GET STARTED:

You will be prompted to pair the Voice Remote with Alexa, connect to a network, and sign into an Amazon account. You can also enable parental controls.



Night Vision

USES AN INFRARED CAMERA TO DETECT PEOPLE & LARGE ANIMALS

LEVEL 1 WARNING

• Yellow telltale and yellow highlight around detected pedestrian/animal when it is approaching or is in the vehicle's path

LEVEL 2 WARNING

- Red telltale and red highlight around detected pedestrian/animal when it is directly in the vehicle's path, near the headlights, and a collision is possible
- If enabled, a chime will sound and a video pop-up may display when a detection event occurs

KEEP IN MIND:

Warm objects (e.g. animals) will appear lighter on the display while cold objects (e.g. traffic signs) will appear darker.

NIGHT VISION SCREEN







 
Displays **green** when Night Vision alerts are active and **gray** when suppressed



Pedestrian Warning



Animal Warning

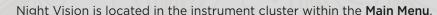

Hands-Free Liftgate



LIFTGATE NOT OPENING?

Make sure your kicking motion is straight in and out and within the activation zone.

Do not move your foot sideways or in a sweeping motion, as the sensors may not detect the motion.

The Hands-Free Liftgate can be activated/deactivated in Uconnect Settings.

Use a Straight In-and-Out **Kicking Motion**



Activation Zone

Rain Sensing Wipers

When enabled in Uconnect Settings, this feature automatically activates the wipers, and adjusts speed as needed, when rain or snow is detected on the windshield.

The windshield wipers must be in one of the intermittent positions, not the LOW, HIGH, or OFF position for this feature to operate.

Scan For Wiper Video



Adjustable Liftgate & Passive Entry

ADJUSTABLE POWER LIFTGATE HEIGHT

TO SET AN OPENING HEIGHT:

- Open the liftgate fully, then manually pull down or push up to the desired height.
- Push and hold the liftgate close button for three seconds. An audible chime will sound to let you know that the height has been saved successfully.

TIP:

The liftgate close button is located on the left side trim panel inside the cargo area.



Scan For Liftgate Video



PASSIVE ENTRY

LOCK & UNLOCK YOUR VEHICLE USING THE DOOR HANDLES



WITH YOUR KEY FOB ON YOUR PERSON:

- Touch the **lock icon** on the door handle, for a minimum of a 1/2 second, making sure not to grab the door handle, to lock the vehicle.
- Grab the door handle to unlock the vehicle.

KEEP IN MIND:

Grabbing the driver's door handle will unlock the driver's door. The front passenger handle (or a rear handle, if equipped with four-door Passive Entry) unlocks all doors and the liftgate.

Scan For Passive Entry Video





Warning & Indicator Lights

*	Air Bag		Battery Charge	BRAKE	Brake	魯	Door Open	<u>@</u> !	Electric Power Steering (EPS) Fault
) /(Electronic Throttle Control (ETC)		Engine Temperature		Hood Open	S	Liftgate Open		Night Vision Animal Detected
	Night Vision Pedestrian Detected	45%	Oil Pressure	ملح	Oil Temperature	4	Rear Seat Belt Reminder	*	Seat Belt Reminder
	Transmission Temperature		Vehicle Security	4WD LOW	4WD Low		Active Lane Management		Air Suspension Active
AERO	Air Suspension Aerodynamic Height	ENTRY/ EXIT	Air Suspension Entry/Exit Indicator		Air Suspension Fault	OFF RD	Air Suspension Off-Road 1	OFF RD 2	Air Suspension Off-Road 2
(ABS)	Anti-Lock Brake System (ABS)	HOLDI	Auto HOLD! Fault	(P)	Electronic Park Brake	77	Electronic Stability Control (ESC) Active	€ VoFF	Electronic Stability Control (ESC) OFF
	Engine Check/ Malfunction Indicator	OFF	Forward Collision Warning (FCW) OFF		Low Fuel		Low Washer Fluid	NEUTRAL	NEUTRAL
	Night Vision Animal Detected	Â	Night Vision Pedestrian Detected	SERV 4WD	Service 4WD	Ø	Service Active Lane Management	웄!	Service Adaptive Cruise Control
>√!	Service Forward Collision Warning	(A)	Service Stop/Start System	SWAY BAR	SWAY BAR	SWAY BAR	Sway Bar Fault	(!)	Tire Pressure Monitoring System
	Active Lane Management		Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target	HOLD	Auto Hold	(6)	Cruise Control SET
却	Front Fog	<u> </u>	Night Vision Active	÷DO÷	Parking/Headlights On	A	Rear Seat Belt Fastened	F	Sport Mode
(A)	Stop/Start Active	4	Turn Signal	F	Adaptive Cruise Control (ACC) Ready	(•)	Cruise Control Ready	-0	Hill Descent Control (HDC)
	Rear Seat Unoccupied		Selec-Speed Control		High Beam	9/1	Night Vision Suppressed		

Your vehicle may be equipped with different features than shown in this guide. For additional information on any of the topics in this publication, please refer to your Owner's Manual.