



Getting to know your 2025 Tahoe & Suburban



chevrolet.com

Review this quick reference guide for an overview of some important features in your Chevrolet Tahoe or Suburban. Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. More information can be found in your Owner's Manual and at chevrolet.com/owners. For easy reference, keep this guide in your glove box.

Certain restrictions, precautions and safety procedures apply to your vehicle.
Please read your Owner's Manual for complete instructions.



INSTRUMENT PANEL

Electronic Parking Brake Switch

Traction Control-StabiliTrak Off/
Park Assist/Auto Engine Stop-Start
Disable/Lane Keep Assist⁺/
Hill Descent Control⁺/
360 Camera Buttons

Cruise Control/
Adaptive Cruise
Control/Forward
Collision Alert
Buttons

Turn
Signal/
Windshield
Wipers/
Washer
Lever

Digital
Driver
Display

Driver Information
Center/Audio/
Phone/Voice
Recognition/
Heated Steering
Wheel⁺ Buttons



Power Mirror/
Power
Window/
Buttons

4WD⁺/
Drive
Mode/Air
Suspension
Controls⁺

Exterior/
Instrument
Panel Lamp
Controls

Audio Favorite
Station
Controls
(behind
steering wheel)

Integrated
Trailer
Brake
Control⁺

Steering
Wheel
Adjustment
Control

Audio Volume
Control
(behind
steering
wheel)

SYMBOLS

	Low Fuel		Airbag Readiness		Antilock Brake System
	Brake System		Electronic Parking Brake		Charging System
	Cruise Control Set		Service Electronic Parking Brake		Driver Seat Belt Reminder
	Security		Check Engine		Pass. Seat Belt Reminder
	IntelliBeam		Traction Control Off		Low Tire Pressure
	Engine Oil Pressure		Lights On Reminder		Power Outlet On

Electronic
Precision Shift
Transmission
Controls

Volume
Control

Infotainment
System
Touchscreen

Hazard Warning
Flashers Button





Engine
Start/
Stop
Button

 





Driver's
Temperature
Control

Climate
Controls

Wireless Phone
Charging Pad*/
USB Ports

Passenger's
Temperature Control

-  4WD Modes
-  Hill Descent Control
-  Lane Keep Assist
-  Vehicle Ahead
-  Forward Collision Alert

-  Engine Coolant
-  Pedestrian Ahead
-  StabiliTrak Active
-  StabiliTrak Off
-  Trailer Sway Control
-  Door Ajar

High Country model shown

Read your Owner's Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.

See Introduction in your Owner's Manual.

REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)


Lock

Press to lock all doors and liftgate.

Unlock

Press to unlock the driver's door. Press again to unlock all doors and liftgate.

Remote Windows[†]

Press and hold the  button until the windows are fully open. To enable, go to Settings > Vehicle > Remote Lock, Unlock, Start > Remote Window Operation.

Remote Mirrors[†]

To enable the automatic power folding mirrors, go to Settings > Vehicle > Comfort and Convenience > Remote Mirror Folding.

Rear Liftglass

Press twice to open the rear liftglass.



Power Liftgate[†]


 
Press twice to open or close the liftgate. Press once to stop the liftgate.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. Press and hold to activate the alarm. Press again to cancel the alarm.

Remote Vehicle Start

Press twice to start the vehicle from outside. After entering the vehicle, press the **ENGINE START/STOP** button.

- During a remote start, the engine will run for 15 minutes. Press the  button twice again for an additional 15 minutes.
- To cancel a remote start, press and hold the  button until the parking lamps turn off.

Note: To change the remote settings, go to Settings > Vehicle > Remote Lock, Unlock, and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

KEYLESS ACCESS SYSTEM

The Keyless Access System allows locking/unlocking of the doors and liftgate without removing the Remote Keyless Entry transmitter (key fob) from your pocket or bag. The key fob must be within 3 feet of the liftgate or the door being unlocked/locked.

KEYLESS UNLOCKING

With the key fob within range:

- ▶ Press the button on the driver's door handle to unlock the driver's door; press again to unlock all doors and liftgate.
- ▶ Press the button on a passenger's door handle to unlock all doors and liftgate.

KEYLESS LOCKING

With the ignition off, the key fob removed from the vehicle and all doors closed:

- ▶ Press the button on any door handle to lock all doors and liftgate immediately.
- ▶ If Passive Locking is turned on in the Settings menu, all doors and liftgate will lock automatically after a short delay.

Note: To change the lock settings, go to Settings > Vehicle > Remote Lock, Unlock, and Start on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.



KEYLESS (PUSH-BUTTON) START

The Remote Keyless Entry transmitter (key fob) must be in the vehicle to turn on the ignition.

STARTING THE ENGINE

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine. The green button light will illuminate.

Note: If the key fob battery is weak, place the key fob in the center console left cupholder to enable the engine to start. Replace the key fob battery as soon as possible.



STOPPING THE ENGINE/OFF

- ▶ Shift to Park and then press the **ENGINE START/STOP** button to turn off the engine.

ACCESSORY MODE

- ▶ With the engine off and the brake pedal not depressed, press the **ENGINE START/STOP** button to place the ignition in Accessory Mode. The amber button light will illuminate. Press and hold the **ENGINE START/STOP** button for several seconds to place the ignition in Service Mode to operate additional systems.

See Driving and Operating in your Owner's Manual.

AUTO ENGINE STOP/START OPERATION

The fuel-saving Automatic Stop/Start system automatically turns off the engine, referred to as an Auto Stop, when the brake pedal is pressed and the vehicle is at a complete stop, if certain operating conditions are met. When the brake pedal is released or the accelerator pedal is pressed, the engine will restart.

The engine may remain running or restart when the vehicle is stopped, depending on current operating conditions.

- ▶ Press the **(A) Auto Stop** button on the left side of the instrument panel to turn the system off or on again. The button indicator turns off when the system is disabled.

The Automatic Stop/Start system is enabled each time the vehicle is started.

See Driving and Operating in your Owner's Manual.

BUCKLE TO DRIVE

Buckle to Drive prevents the vehicle from shifting out of Park if the engine is running, the brake pedal is pressed and the driver's seat belt is not buckled. Buckle the seat belt to shift out of Park. If the seat belt remains unbuckled, the vehicle can be shifted out of Park after several seconds. Shifting from Park is prevented once each ignition cycle.

- ▶ To turn off or on again, go to Settings > Vehicle > Buckle to Drive on the infotainment screen. The vehicle may need to be restarted to register the setting change.





See Seats and Restraints in your Owner's Manual.

DIGITAL DRIVER INFORMATION CENTER

The reconfigurable Driver Information Center (DIC) displays a variety of vehicle messages and system information.


DIC CONTROLS

Use the controls on the right side of the steering wheel to view and select Vehicle, Audio and Phone information.

- ▶ Press the  Display button to view and scroll through the cluster display layouts.
- ▶ Press the  or  switch to scroll through the active menu.
- ▶ Press the  switch to open a menu, or to select or reset an item.



VEHICLE INFORMATION

1. Press the  Vehicle Status icon on the infotainment screen to view all available vehicle information.
2. Select the Maintenance, Gauges or Trip button, or select an item on the vehicle graphic.
3. Select an item to view additional information or to reset an item.
4. When viewing an item, select Add to Driver Display to display an item or Remove from Display to remove an item on the driver display.



See Instruments and Controls in your Owner's Manual.

VEHICLE CUSTOMIZATION

Some features can be turned on/off or customized using the Settings menus on the infotainment screen, including Remote Start, Power Liftgate, Auto Heated/Ventilated Seats[◆], Mirror Folding[◆], Wipers and others.

1. Select Settings on the Home page.
2. Select the desired menu.
3. Select the desired feature and setting.
4. Press < Back to exit each menu.



See Infotainment System in your Owner's Manual.

ELECTRONIC PRECISION SHIFT TRANSMISSION

The automatic transmission is electronically controlled using the shift lever on the right side of the steering column. The selected position is illuminated in red on the lever and is shown on the cluster display.

Park – Press the P button on the end of the lever to shift into Park.

Reverse – Press the brake pedal and then pull the lever toward you and up to shift into Reverse.

Neutral – Press the brake pedal and then pull the lever toward you and hold briefly to shift into Neutral.

Note: The vehicle will not stay in Neutral for an extended period. It will automatically shift into Park. See Car Wash Mode in your Owner's Manual.

Drive – Press the brake pedal and then pull the lever toward you and down to shift into Drive.

Manual Mode – With the transmission in Drive, press the L (Low) button on the steering wheel to shift manually. Press the top-left (-) button (on the back of the steering wheel) to downshift and the top-right (+) button (on the back of the steering wheel) to upshift. Press the L button again to return to Drive.



See Driving and Operating in your Owner's Manual.

SEATS


DRIVER'S SEAT ADJUSTMENTS

 
A. Seat Position/Cushion Adjustment

B. Seatback Raise/Recline

C. Lumbar Adjustment


SET DRIVER'S SEAT MEMORY POSITIONS

1. With the vehicle On and in Park, adjust the driver's seat and power outside mirrors to the desired positions.
 2. Press and release the **SET** button on the driver's door. A beep will sound.
 3. Immediately press and hold button **1** or **2** until two beeps sound.
- To store a seat position for exiting the vehicle, repeat these steps using the  **Exit** button instead of button **1** or **2**.

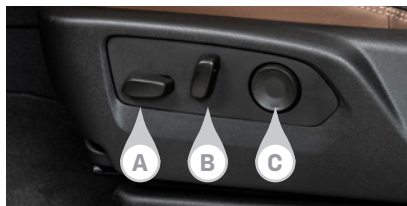

SEATS

RECALL DRIVER'S SEAT MEMORY POSITIONS

- ▶ Press and hold button **1, 2** or  **Exit** until the set position is reached.
- ▶ To enable the seat positions to be recalled automatically when the vehicle is turned On/Off (for exit recall, the driver's door must be opened), go to Settings > Vehicle > Seating Position.





2ND-ROW SEAT ADJUSTMENTS

- ▶ To slide a 2nd-row seat, lift the front lever (A) on the side of the seat cushion.
- ▶ To recline a 2nd-row seatback, lift the rear lever (B) on the side of the seat cushion and push on the seatback.
- ▶ To fold a 2nd-row seat, lift the rear lever (B) on the side of the seat cushion or, from the 3rd-row seat, pull the strap (C) on the bottom of the seatback. The seatback will fold forward. Lift the lever or pull the strap again to tumble the seat forward.
- ▶ To return the seat to the upright position, lift the seatback until it locks in place. Slide the seat rearward by lifting the front lever (A) on the side of the seat cushion.




Note: Do not slide the 2nd-row seat while folded.

POWER FOLDING 2ND-ROW SEATS

1. Unbuckle the seat belts, remove anything under or in front of the seats, and move the front seats forward to allow room for the folded seats.
2. Press the  **Seat Release** button (D) on the panel behind each rear door or the  **2nd-Row Seat** button (E) in the rear cargo area to fold the seatback.
3. Press either button again to tumble the seat forward.
- ▶ To return the seat to the upright position, pull the seat down until it latches to the floor and then lift the seatback until it locks in place.



POWER FOLDING/UNFOLDING 3RD-ROW SEATS



1. Unbuckle the seat belts, remove anything on the seats, and move the 2nd-row seats forward to allow room for the folded seats.
2. Press and hold the bottom of the  **3rd-Row Seat** button (F) in the cargo area or  **3rd-Row Folding Seat** button on the front overhead console to fold the seatback.
- ▶ To unfold the seat, press and hold the top of either  button.



See Seats and Restraints in your Owner's Manual.

POWER LIFTGATE

OPEN/CLOSE THE POWER LIFTGATE

- ▶ Press the  **Power Liftgate** button on the Remote Keyless Entry transmitter (key fob) twice.
- ▶ Press the  **Power Liftgate** knob (A) on the front overhead console.
- ▶ Press the touchpad on the exterior liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the liftgate latch to close the liftgate.



PROGRAMMING THE LIFTGATE HEIGHT

1. Turn the **Power Liftgate** knob (A) to the 3/4 position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch (C) until the turn signals flash and a beep sounds.



HANDS-FREE OPERATION

The liftgate will open automatically when the key fob is within 3 feet (authentication zone) of the rear of the vehicle for several seconds. Beeps sound and the taillights flash before the liftgate will open. Move the key fob more than 3 feet away from the vehicle to cancel automatic opening.

Hands-free operation will be unavailable until the key fob has been moved more than 9 feet (approach zone) away from the vehicle for some time after an automatic opening or if an automatic opening was canceled.

Once the approach zone (9 feet) has been entered, enter the authentication zone (3 feet) within 8 seconds for the system to function properly. If this window is missed, step out of the approach zone and wait for 20 seconds before attempting the hands-free operation again.

Note: To change the hands-free operation settings, go to Settings > Vehicle > Comfort and Convenience > Hands-Free Exterior Storage Access on the infotainment screen.

See Keys, Doors and Windows in your Owner's Manual.

POWER RUNNING BOARDS

The Power Running Boards lower automatically when a door is opened and retract after the doors are closed.

- ▶ To turn the boards on or off, deploy the boards for cleaning, or to use the boards with the doors closed, with the vehicle in Park or Neutral, go to Settings > Vehicle > Power Assist Steps.

See Keys, Doors and Windows in your Owner's Manual.

INFOTAINMENT SYSTEM

Read your Owner's Manual for important information about using the infotainment system while driving.

Controls:
Additional
vehicle
controls,
including HUD

Power
On/Off/
Mute

Volume

Applications Tray
Shortcuts to commonly
used apps: Vehicle Info,
Traction Control, Phone,
Audio, Home


Applications♦:
Touch a screen
icon to access
an app

Additional Pages:
Swipe to display
overview page or
additional page of
apps (if available)



The infotainment system uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone or portable audio player, and offers hands-free voice control. Use simple gestures on the touchscreen, such as tap, drag and swipe, to interact with the system. For additional information, visit chevrolet.com/support.

MANAGING HOME PAGE ICONS

1. Press the  Home icon.
2. To enter edit mode, touch and hold the Home page icon to move.
3. Continue holding the icon and drag it to the desired position on the screen or the app tray, and then release.

STORING FAVORITES

Radio stations from all bands (AM, FM or SiriusXM♦) can be stored in any order.

1. Tune in a radio station. The Sources menu is at the top of the Audio page.
2. Touch and hold one of the Favorite buttons until a beep is heard.

SIRIUSXM WITH 360L™♦

The personalized content of SiriusXM with 360L offers more than 200 channels, including ad-free music, sports, comedy, talk and news, along with access to On Demand shows, performances and interviews. Certain features require a SiriusXM subscription and a Connected Access plan. See siriusxm.com and onstar.com for details.

INFOTAINMENT SYSTEM

GOOGLE BUILT-IN

Google built-in provides access to your favorite apps, including Google Assistant, Google Maps and Google Play.

- ▶ Sign in to your Google Account to get your apps, messages, custom directions and more in your vehicle.

Google Assistant – Talk to Google to get hands-free help. Easily get directions, play media, control vehicle functions and more.

- ▶ To start, say “Hey Google,” tap the Google Assistant icon on the Home page, or press the **Push to Talk** button on the steering wheel.



Google Maps – Reach your destination faster with real-time traffic information, automatic rerouting and voice control. Sign in for personalized maps with home and recent locations.

Google Play – Download some of your favorite apps in your vehicle just as you would on your phone to listen to music, podcasts, audiobooks and more.

Note: Google built-in services are subject to limitations and availability may vary by vehicle, infotainment system and location. Select service plan required. Certain Google actions and functionality may require account linking. User terms and privacy statements apply. Google, Google Play and Google Maps are trademarks of Google LLC.

APPLE CARPLAY® AND ANDROID AUTO™

1. There are two ways to connect to Apple CarPlay or Android Auto:
 - Wireless Connection – Connect your phone by pairing it to the in-vehicle Bluetooth system. Turn on wireless Apple CarPlay or Android Auto in your phone's settings.
 - Wired Connection – Connect your phone to a USB data port using the USB cable provided with your phone. Aftermarket USB cables may not work.
2. Follow the instructions on the infotainment system and the phone.
3. The Apple CarPlay or Android Auto icon will illuminate when connected. Touch the icon to have your apps displayed.

PORTABLE AUDIO DEVICES

A smartphone, MP3 player or a USB flash drive can be connected to a USB data port located at the front of the center console.

- ▶ Touch Audio and then touch the Source menu to select the USB device.

NATURAL VOICE RECOGNITION

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press and hold the **Push to Talk** button on the steering wheel.
2. After the prompt, say what you want it to do using natural speech. Example: “Call Dave.” Say “Help” for assistance.

 
See Infotainment System in your Owner's Manual.

BLUETOOTH® SYSTEM

Read your Owner's Manual for important information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The vehicle must be stopped to pair a device. Not all devices will support all functions.

PAIR A PHONE

1. Press and hold the  **Push to Talk** button to start the pairing process on the infotainment screen (if a phone is not connected) or select the Phone icon > Manage Phones > +Add Phone on the infotainment screen.
2. Start the pairing process on your phone. From the phone's Bluetooth settings, select the name shown on the infotainment screen.
3. Follow the pairing instructions.
4. When pairing is complete, the phone screen is displayed.

FIRST TO CONNECT PHONE

Multiple phones can be paired to the Bluetooth system. The system connects to the phone that is set to First to Connect.

- ▶ To set the First to Connect phone, go to Settings > Connections > Phone > Options > First to Connect.

See Infotainment System in your Owner's Manual.

WI-FI® HOTSPOT


With the vehicle's available Wi-Fi Hotspot, up to 7 devices (smartphones, tablets and laptops) can be connected to high-speed internet. For more information on use and system limitations, visit chevrolet.com/support.

- ▶ To retrieve the name and password for the hotspot, select the Wi-Fi Hotspot icon on the infotainment screen.

See Infotainment System in your Owner's Manual.

WIRELESS PHONE CHARGING

The Wireless Phone Charging system is located at the front of the center console. Visit chevrolet.com/support to check mobile device compatibility. See your phone retailer for details on required phone accessories.

 
1. The vehicle must be On or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the phone, screen facing up, at the rear edge of the pad.
4. The  charging symbol will appear on the infotainment screen when charging.




See Instruments and Controls in your Owner's Manual.

REAR SEAT MEDIA SYSTEM

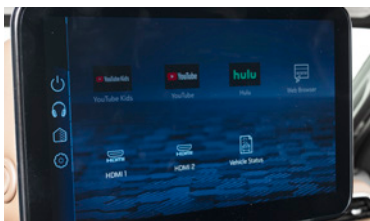

The Rear Seat Media system includes 2 touchscreens, 2 HDMI ports and 2 Bluetooth wireless headphones along with access to select streaming services (requires unlimited data plan).



- ▶ To power on the system and view the Home page, double tap anywhere on either screen.
- ▶ To control the screens from the front seats, select the Entertainment Hub App icon on the infotainment screen.
- ▶ Touch the  Headphone icon on the screen to pair headphones or view a list of available headphones.

See Infotainment System in your Owner's Manual.

INTELLIBEAM LIGHTING SYSTEM

The IntelliBeam system automatically turns the high-beam headlamps on/off based on traffic conditions when it is dark enough, the lamp control is in the AUTO or Headlamps position and the system is activated, indicated by the  symbol on the instrument cluster. A blue  symbol appears when the high-beam headlamps are on.

- ▶ To enable the IntelliBeam system, activate the high/low-beam changer 2 times within 2 seconds using the turn signal lever.





Note: IntelliBeam activates the high-beam headlamps only when driving more than 25 mph.

See Lighting in your Owner's Manual.

ADAPTIVE CRUISE CONTROL

The system enhances regular Cruise Control to maintain a following gap – the time between your vehicle and a vehicle detected directly ahead – by accelerating or braking automatically while you continue to steer.



- ▶ Press and hold the  **Cancel** button to switch between regular  Cruise Control and  Adaptive Cruise Control.
- ▶ Use the steering-wheel controls to set and adjust Cruise Control or Adaptive Cruise Control.
- ▶ With Adaptive Cruise Control active, press and release the  **Following Gap** button to select a targeted gap setting of Far, Medium or Near.

See Driving and Operating in your Owner's Manual.

OVERHEAD CONSOLE FEATURES



DOME LAMPS

- ▶ To turn a reading lamp on/off, press the lamp lens.
- ▶ To turn on/off all reading/dome lamps with the doors closed, press and hold any lens. The dome lamps will not turn on if the **OFF** button is pressed on the overhead console.

Refer to your Owner's Manual for more information about the Overhead Console features.

POWER SLIDING CENTER CONSOLE

The Power Sliding Center Console moves rearward for additional storage options and easier access to rear console features.

- ▶ Press and hold the ^ or v button on the front overhead console to move the center console rearward or forward.
- ▶ With the center console fully rearward, pull the lower handle (A) to pull out the lower storage compartment.
- ▶ With the center console moved rearward, push forward on the console armrest (B) to slide it forward.



See Storage in your Owner's Manual.

DRIVER MODE CONTROL ♦/FOUR-WHEEL DRIVE ♦

DRIVER MODE CONTROL

The Driver Mode Control settings automatically adjust various vehicle control systems based on driving preferences, weather and road conditions. The modes are displayed on the infotainment screen.

- ▶ Rotate the Driver Mode Control knob (A) on the left side of the instrument panel to select a mode.



4WD model shown


Normal – Use for normal driving.

Sport – Use for enhanced responsiveness on paved roads.

Snow/Ice (2WD only) – Use for enhanced traction during slippery conditions.

Off-Road (4WD only) – Use for enhanced control on unpaved roads or trails at moderate speeds.

Tow/Haul – Use to reduce shift cycling when towing or hauling heavy loads in stop-and-go traffic, rolling hills or busy parking lots.

Terrain (4WD only ♦) – Press the  button for enhanced control in low-speed, off-road conditions. The system automatically provides light vehicle braking to simulate engine vehicle braking. Only available with the single-speed transfer case when in **4↑**.

FOUR-WHEEL DRIVE

- ▶ Use the four-wheel-drive buttons (B) on the left side of the instrument panel to shift into and out of four-wheel drive.



Shift between **2↑**, **4↑**, and **AUTO** at normal driving speeds. The current status of the transfer case is displayed on the Driver Information Center.

AUTO Automatic 4WD High – Use when traction conditions vary.

2↑ 2WD High – Use for most streets and highways.

4↑ 4WD High – Use when extra traction is needed or in most off-road driving.



4↓ 4WD Low (2-Speed Transfer Case ♦) – Use when driving off-road in deep sand, mud or snow, or on steep hills. Shift into or out of this mode when the vehicle is stopped or moving less than 3 mph with the transmission in Neutral. Shift the transmission into gear when the indicator light stops flashing.

N Neutral (2-Speed Transfer Case ♦) – Use to dolly or dinghy tow the vehicle. Refer to your Owner's Manual for the shift procedure.


See Driving and Operating in your Owner's Manual.

AIR RIDE ADAPTIVE SUSPENSION


The Air Ride Adaptive Suspension offers load-leveling and adjustable ride height capabilities.

1. Press the  **Ride Height** button (A) to display the menu on the Driver Information Center.
2. Turn the knob (B) left or right to select a ride height in the menu.
3. To save the selection, press the  button again or wait for the menu to time out.

 **Normal Ground Clearance** – Use for normal driving.

 **Entry/Exit Ground Clearance** – Lowers the vehicle for easy entry and exit.

 
 **Increased Ground Clearance** – Raises the vehicle 1 inch from Normal. 4WD⁺ models only.

 **Maximum Ground Clearance** – Raises the vehicle 2 inches from Normal. 4WD⁺ models only. Vehicle must be in 4WD Low.

Aero – Automatically lowers the vehicle when vehicle speed exceeds 65 mph for a period of time to improve aerodynamics. This feature cannot be user-selected.

- ▶ To have the vehicle automatically lower to the Entry/Exit height when the vehicle is shifted to Park, go to Settings > Vehicle > Ride Height > Easy Exit Vehicle Height.


Note: Heavy use of the air suspension may cause the system to temporarily suspend all height changes to allow the air compressor to cool down.

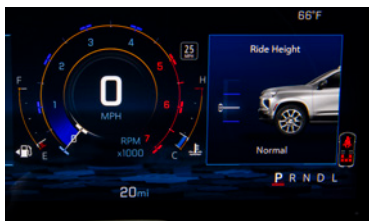

See Driving and Operating in your Owner's Manual.

HILL DESCENT CONTROL

Hill Descent Control sets and maintains vehicle speed from 1–19 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button (A) on the left side of the instrument panel. Vehicle speed must be below 37 mph to enable the system. The  Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- switch on the steering wheel. The adjusted speed becomes the new set speed. The symbol flashes when the system is actively applying the brakes to maintain vehicle speed.



See Driving and Operating in your Owner's Manual.

DRIVER ASSISTANCE SYSTEMS


Safety or driver assistance features are not a substitute for the driver's responsibility to operate the vehicle in a safe manner. The driver should remain attentive to traffic, surroundings and road conditions at all times. Read your Owner's Manual for important feature limitations and information.


Following are some of the many advanced driver assistance systems that may be on your vehicle. Refer to your Owner's Manual for more information on all available systems.


- ▶ To turn the following driver assistance systems on/off or to change the system settings, go to Settings > Vehicle > Collision/Detection Systems on the infotainment screen.


SAFETY ALERT SEAT – The driver's seat pulses – left, right or both sides – to alert you of the direction of potential hazards. Audible alerts may be selected instead.


 

ENHANCED AUTOMATIC EMERGENCY BRAKING – The system works with Forward Collision Alert to help you avoid or reduce the severity of a front-end collision with a vehicle you're following. Camera technology is used to automatically provide hard emergency braking or enhance the driver's hard braking.

FORWARD COLLISION ALERT – The  Vehicle Ahead indicator is green when a vehicle that you're following is detected ahead and is amber when you're following a vehicle ahead much too closely. When approaching a detected vehicle directly ahead too rapidly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected).

- ▶ Press the  **Forward Collision Alert** button on the steering wheel to set the alert timing to Far, Medium or Near.

FRONT PEDESTRIAN AND BICYCLIST BRAKING – During daytime driving between 5 and 50 mph, the system can detect pedestrians and bicycles directly ahead and displays an amber  indicator. When approaching a detected pedestrian or bicycle too quickly, a red alert flashes on the windshield and the Safety Alert Seat pulses or rapid beeps sound (if selected). The system may automatically provide hard emergency braking or enhance the driver's hard braking. Nighttime and low-visibility performance are limited.

REAR PEDESTRIAN ALERT – During daytime driving with the vehicle in Reverse, the system can detect pedestrians directly behind the vehicle and will display an amber  indicator on the infotainment screen. When a pedestrian is detected close to the vehicle, the indicator flashes red and the Safety Alert Seat pulses or rapid beeps sound (if selected). Nighttime and low-visibility performance are limited.

BLIND ZONE STEERING ASSIST – The system helps you avoid a potential collision with a detected vehicle in an adjacent lane. While driving, a  warning symbol is displayed on the left- or right-side mirror when a moving vehicle is detected rapidly approaching or is in that side blind zone. The  warning symbol flashes if a turn signal is activated when a vehicle has been detected on the same side. If a vehicle is detected in the adjacent lane that you are entering, the system provides a brief, firm steering wheel turn to alert you to take action and beeps sound or the Safety Alert Seat pulses (if selected). The green / \ Lane Keep Assist indicator will turn amber and the  warning symbol will flash on the left- or right-side mirror. The steering correction will occur even when using the turn signal in the lane departure direction.

- ▶ To turn on or off, press the  **Lane Keep Assist** button on the instrument panel.

DRIVER ASSISTANCE SYSTEMS

ENHANCED AUTOMATIC PARKING ASSIST – The system can search for a parallel or perpendicular parking space and then steer and brake the vehicle into that space while shifting gears as needed. It can also help you unpark the vehicle after parallel parking. While using the system, you need to remain in your vehicle and be prepared to override and take control.

REAR CROSS TRAFFIC BRAKING – When in Reverse, the system warns of detected cross traffic coming in either direction by displaying a red alert on the infotainment screen and pulsing the left or right side of the Safety Alert Seat or sounding beeps (if selected). The system may automatically provide hard emergency braking.

- ▶ To turn Automatic Parking Assist and Rear Cross Traffic Braking on or off, press the **Park Assist** button on the left side of the instrument panel. To change the settings, go to Settings > Vehicle > Collision/Detection Systems.

HIGH DEFINITION SURROUND VISION

The system uses multiple cameras to display a high-resolution image of the area around your vehicle along with front- and rear-camera views on the infotainment screen. Camera view buttons are on the screen.

- ▶ Select the Camera icon on the infotainment screen or press the **Camera** button on the left side of the instrument panel to activate the cameras. Press the X on the screen or the **Home** button to exit the view.



See Driving and Operating in your Owner's Manual.

REAR CAMERA MIRROR

The Rear Camera Mirror provides a wider, less-obstructed field of view than a traditional mirror to assist when driving, changing lanes and checking traffic conditions.

A. On/Off

Pull or push the lever at the bottom of the mirror to turn the video display on or off.

B. Selection Control

Press and release the button to select the brightness, zoom or tilt setting.

C. Adjustment Controls

Press and release either button to adjust the selected setting.


- ▶ Rotate the Rear Window Wiper control band to the **Washer** position to clean the Rear Camera Mirror lens and rear window.



See Keys, Doors and Windows in your Owner's Manual.

TRACTION CONTROL

The Traction Control system limits wheelspin in difficult driving conditions. The system turns on automatically every time the vehicle is started. Turn off Traction Control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control** button on the left side of the instrument panel to turn Traction Control off or on again.

See Driving and Operating in your Owner's Manual.

TRAILERING

TRAILERING APP[†]

The in-vehicle trailering app on the infotainment screen includes a variety of helpful functions when towing a trailer, including hitching and setup checklists, trailer tire pressure monitoring[†], trailer light testing, customized trailer profiles, trailer theft detection (requires an active OnStar service plan[†]) and more.

INTEGRATED TRAILER BRAKE CONTROL (ITBC)[†]


The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.

- ▶ Squeeze the control together (right side does not move) to manually apply the trailer brakes.
- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.



See Driving and Operating in your Owner's Manual.

TIRE PRESSURE MONITORING WITH TIRE FILL ALERT

The  Low Tire Pressure warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures listed on the Tire and Loading Information label, located below the driver's door latch. Select the Vehicle Status icon to view current tire pressures on the infotainment screen.

The Tire Fill Alert provides visual and audible alerts when inflating a tire (excluding the spare tire). The horn sounds and the turn signals change from flashing to solid when the recommended air pressure is reached.

See Vehicle Care in your Owner's Manual.

ROADSIDE ASSISTANCE

1-800-CHEV-USA (1-800-243-8872)

TTY Users: 1-888-889-2438

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. The Chevrolet Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year to contact a service provider for light services (fuel delivery, jump start, flat tire and lockout) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

ONSTAR ROADSIDE ASSISTANCE

If you have a current OnStar Safety & Security plan, press the blue **OnStar** button or red **Emergency** button (for emergencies only) to get the help you need. An OnStar advisor will use GPS technology to pinpoint your vehicle location and contact the nearest service provider.

To learn more about OnStar services, press the blue **OnStar** button, visit onstar.com, call 1-888-4-ONSTAR (1-888-466-7827) or refer to your Owner's Manual.

MYCHEVROLET MOBILE APP

Download the myChevrolet app to your compatible smartphone (or device) and, if your vehicle is properly equipped, you can use your device to start or turn off your engine, lock or unlock your doors, view key diagnostic information, see your parking location and more.

The app is available on select Apple and Android devices. Service availability, features and functionality vary by vehicle, device and data plan. Device data connection required. Visit onstar.com for more details. Download the mobile app from the App Store or Google Play Store.

MY CHEVROLET ACCOUNT

Get to know your vehicle as well as view your plans, services and rewards with your Chevrolet account. Check out an online Owner's Manual and how-to videos, track your service history and warranty status, manage your OnStar and Connected Services vehicle plans, review your current Vehicle Diagnostics report (active service account required) and more. Create an account today at chevrolet.com/owners.



Some equipment described in this guide may not be included in your vehicle. Contact your dealer for details on a specific vehicle. All information contained in this guide is based on the latest information available at the time of printing and is subject to change without notice. Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner's Manual for complete instructions. Copyright 2024 General Motors LLC. All Rights Reserved.



87855311

**We recommend always using
ACDelco or GM Genuine Parts.**



87855311 A